



Thick panel


1 Cutouts & screw positions

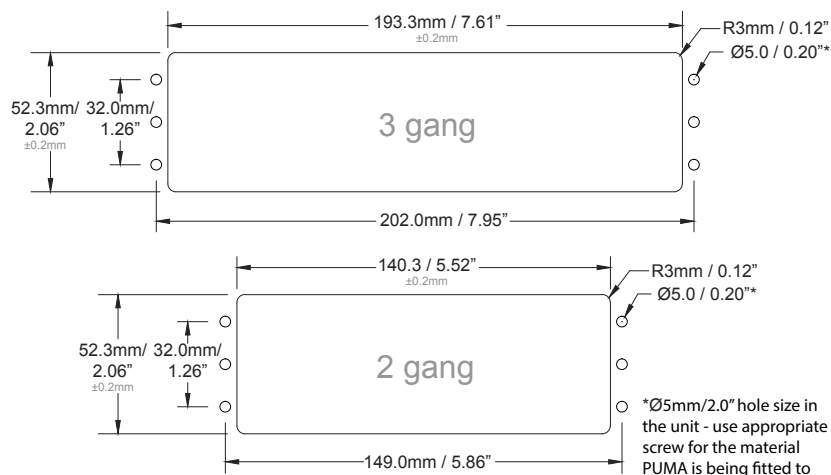


2 Remove frame

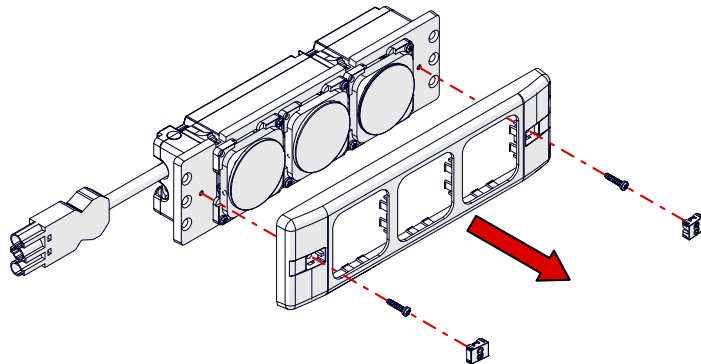


3

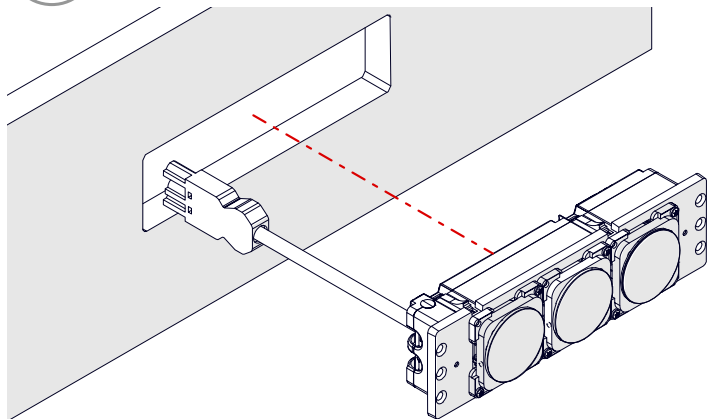


4 Screw PUMA in place

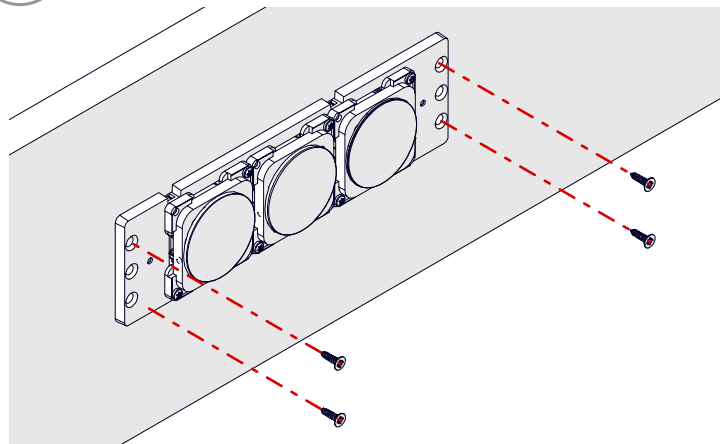

5 Fix frame to PUMA


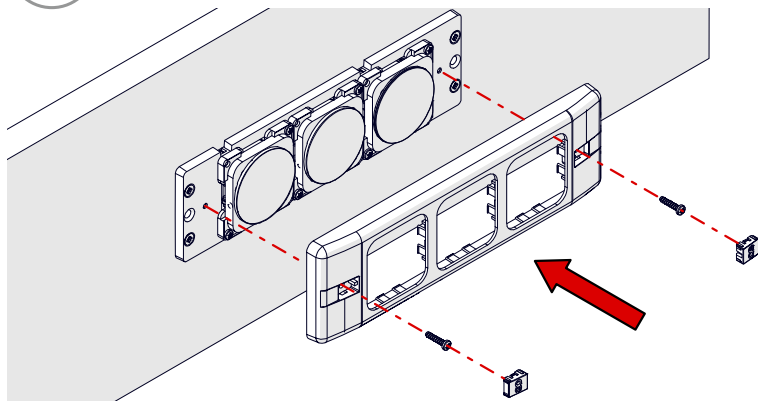


6



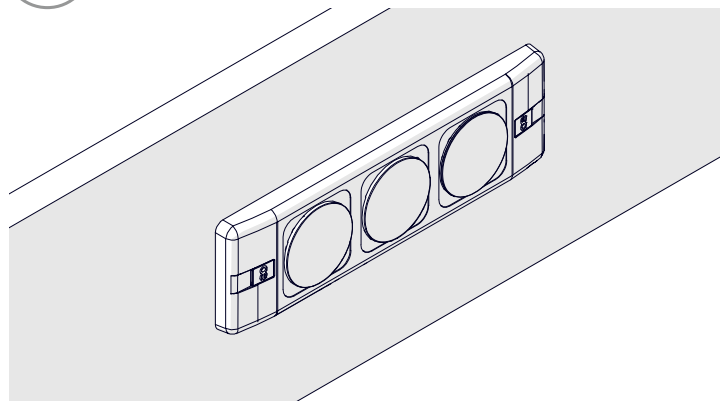


Thin panel

1 Cutouts & depth required

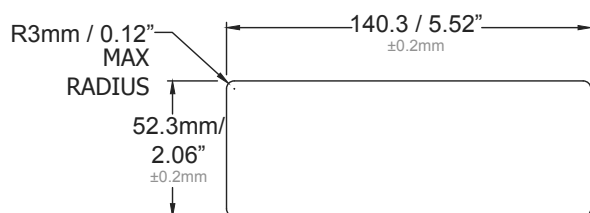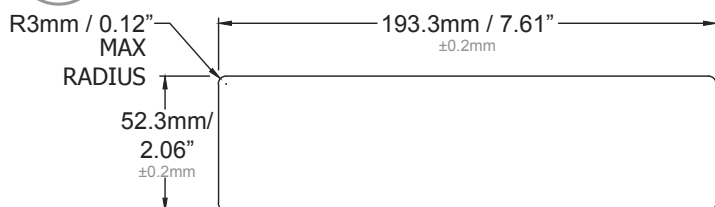


2 Max panel thickness 3mm / 0.12" (+/- 0.1mm / 0.004")

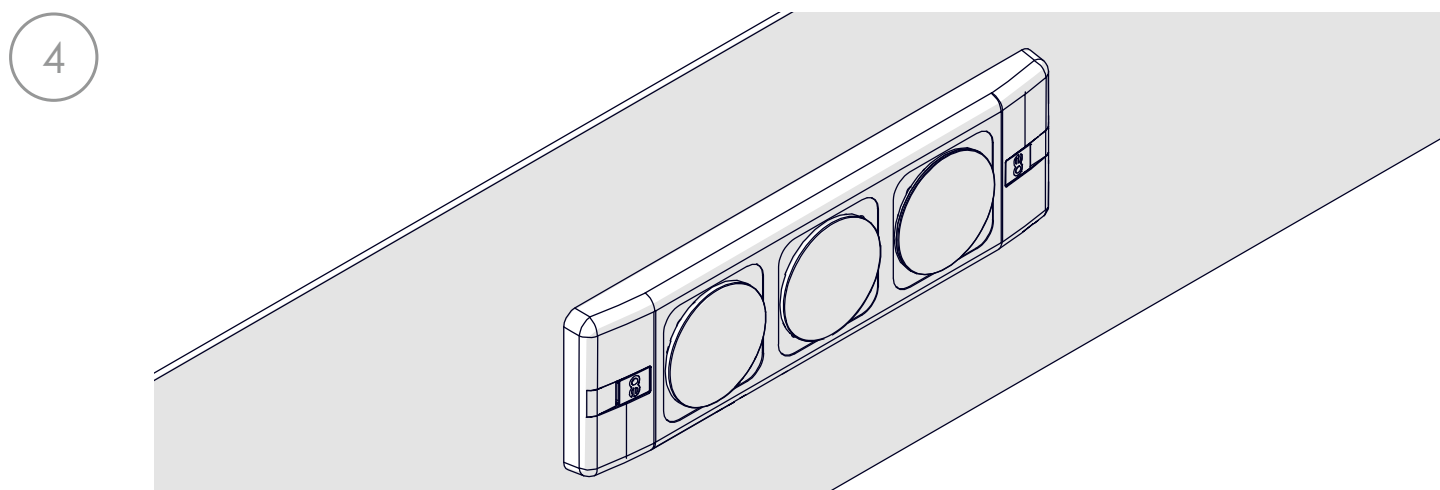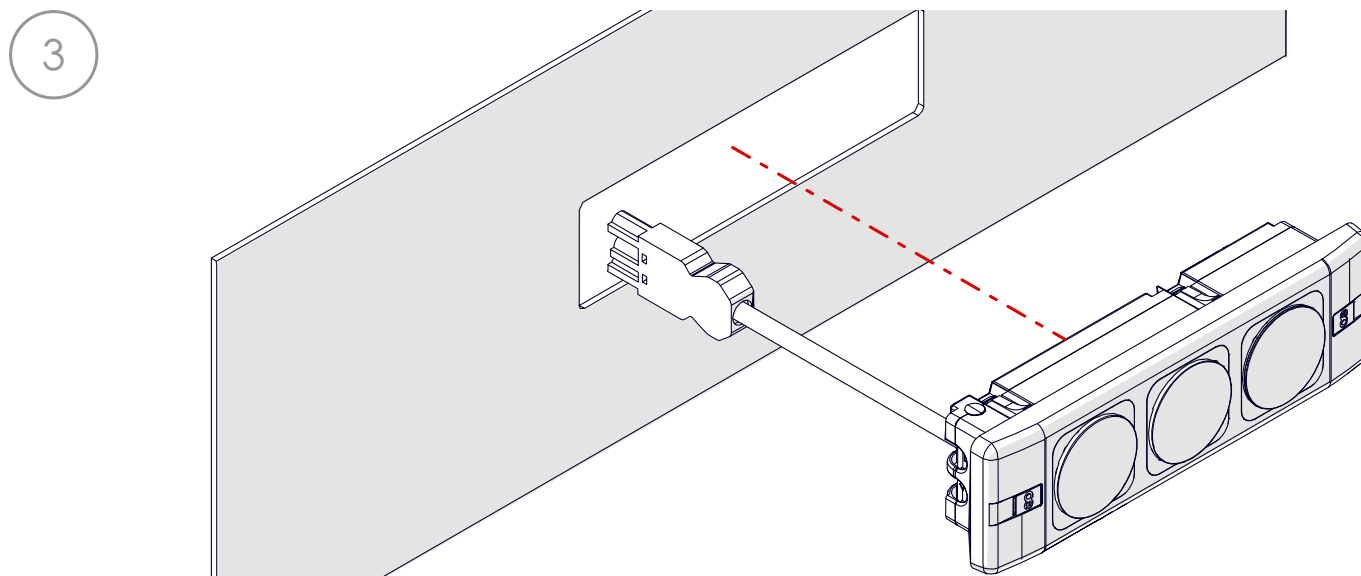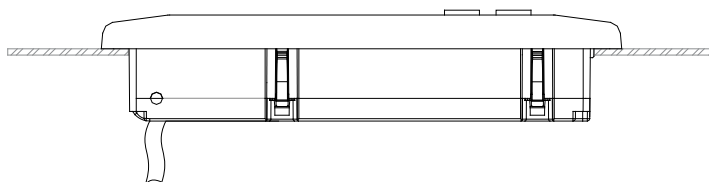


Flush mount


1 Cutouts & screw positions

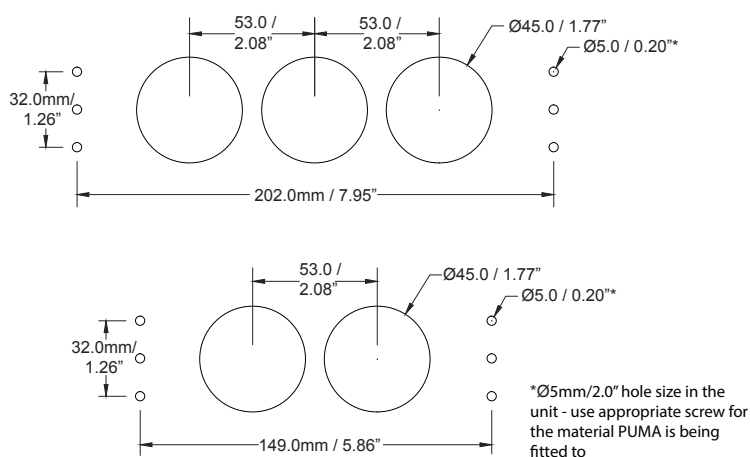


2 Panel thickness must be between 1.5 - 1.6mm/ 0.05" - 0.06"

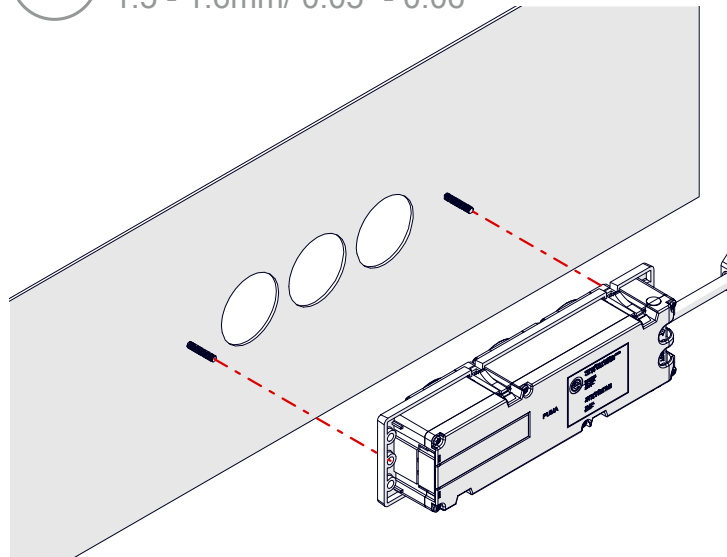


3

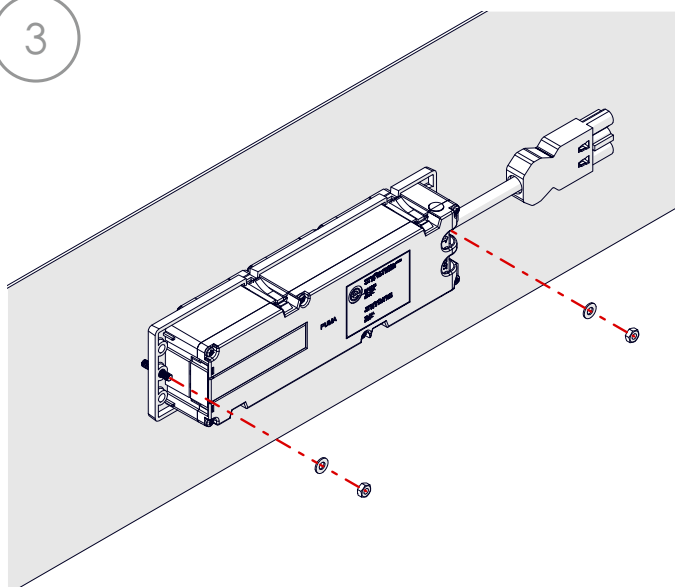


4

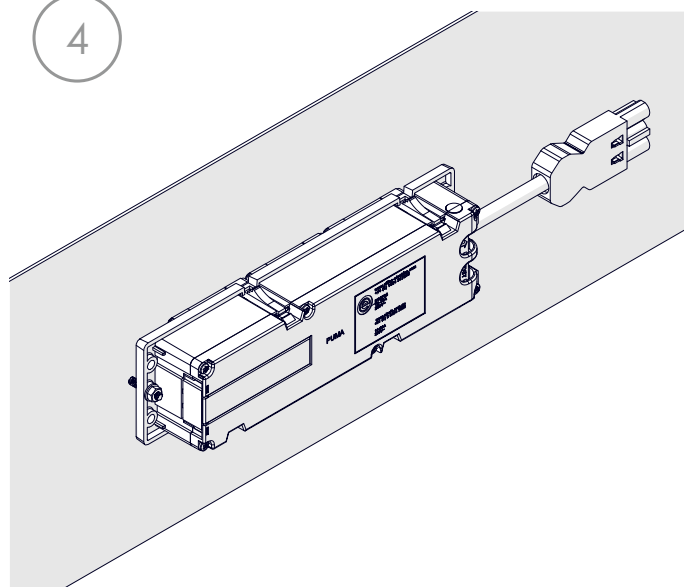

5


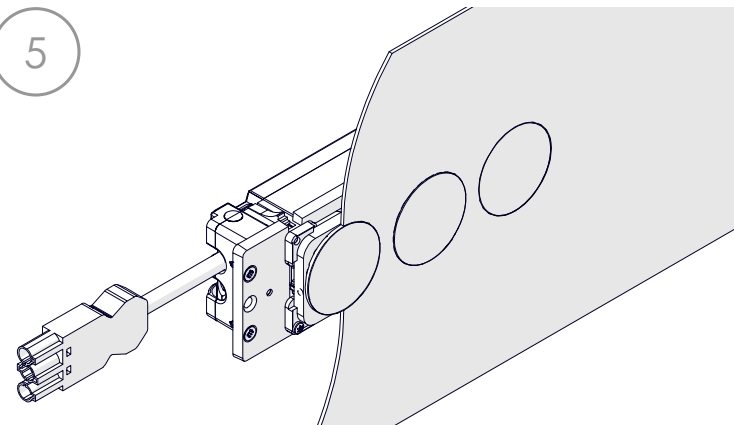


6

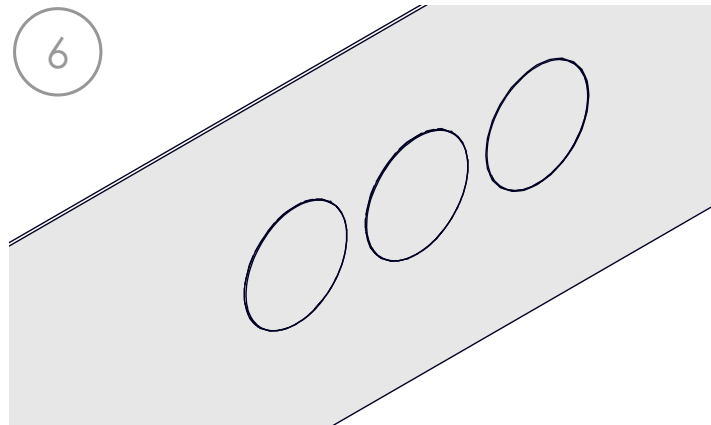


Shallow cavity


1 Cutouts & depth required

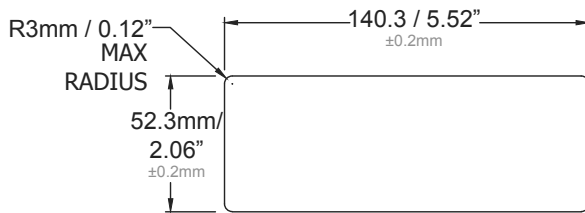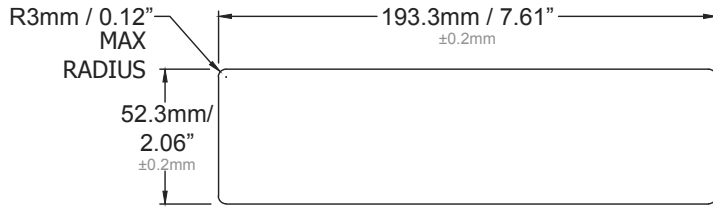

2 Slide in the right hand side

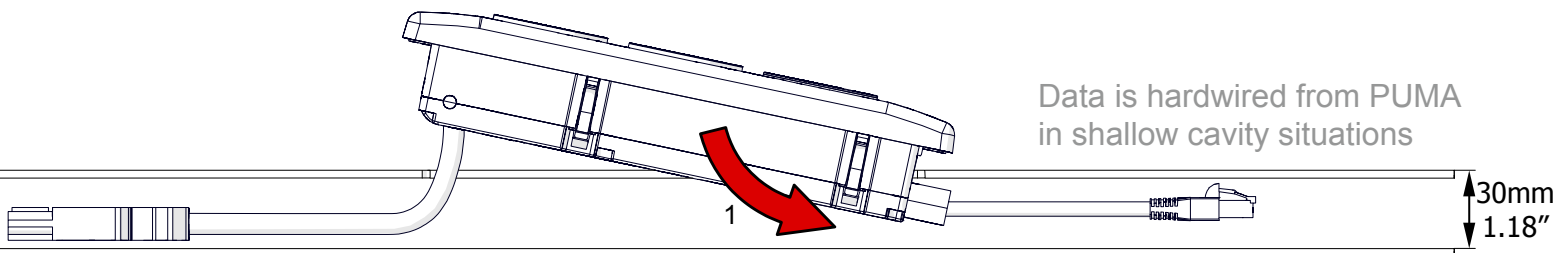

3 Press down to snap in place

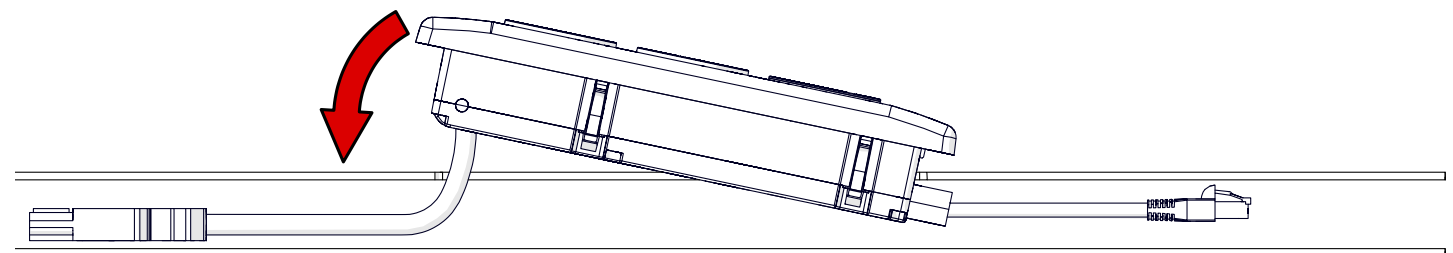

4

