



Clamp Bracket - suitable for desks 10 - 35mm (.39 - 1.37") thick


1 Stick rubber pad to PICCOLO base

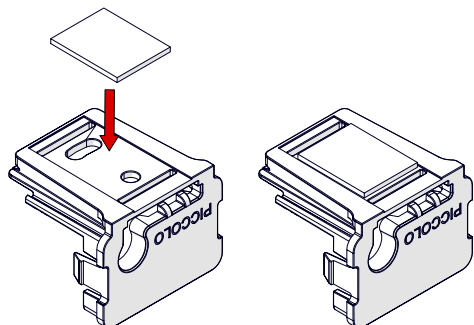

2 Place PICCOLO on surface and insert mounting bracket

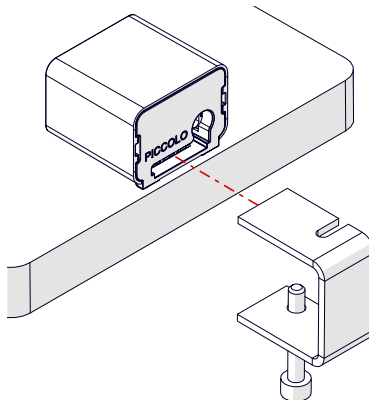



3 Tighten screws

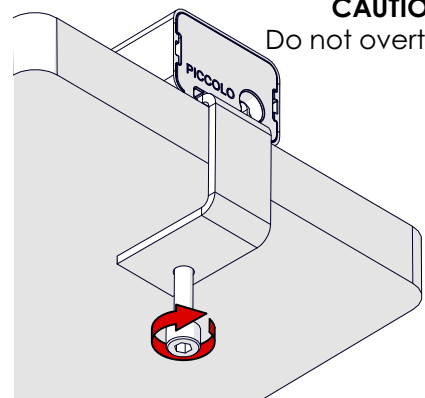



CAUTION
Do not overtighten!

Screw Down - On surface (Screw hole is 5mm (0.20"), suitable for < No. 10 screw)

1 Screw PICCOLO base to surface using dimensions below

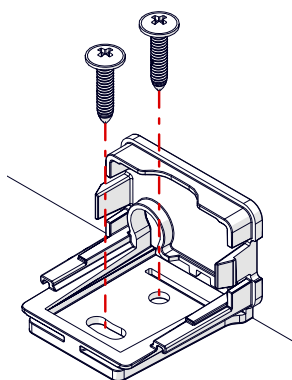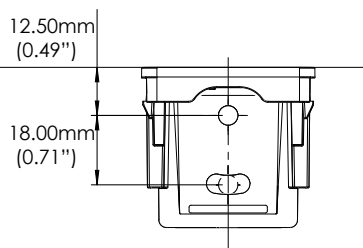


2 Slide PICCOLO body onto base until 'click' is heard

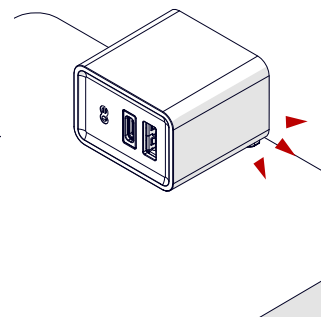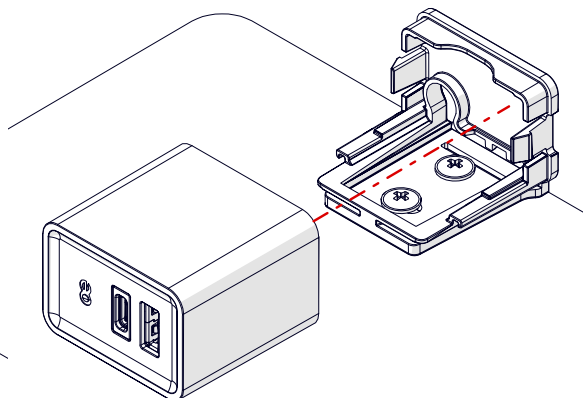


Screw Down - Under surface (Screw hole is 5mm (0.20"), suitable for < No. 10 screw)



1 Screw PICCOLO base to surface using dimensions below

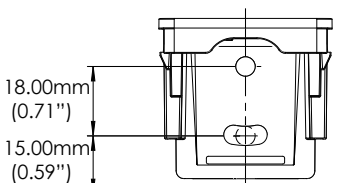






Front of desk

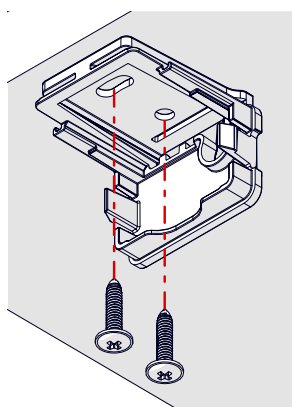





2 Slide PICCOLO body onto base until 'click' is heard

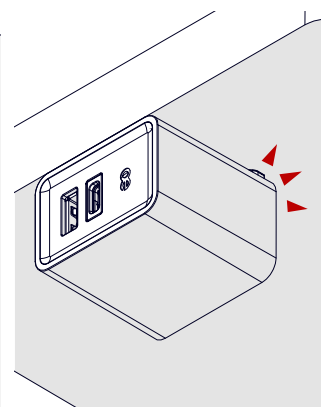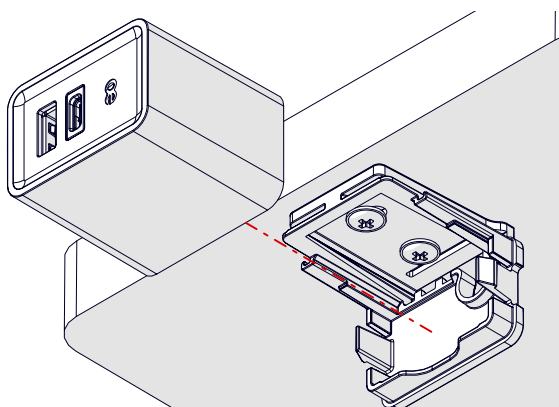

Stick Down

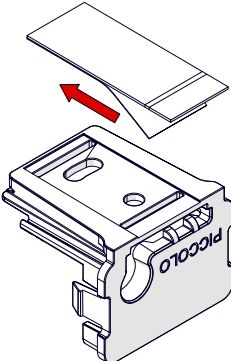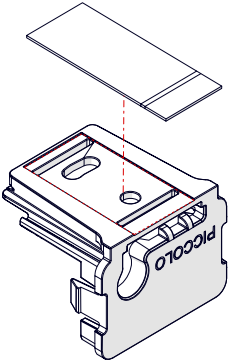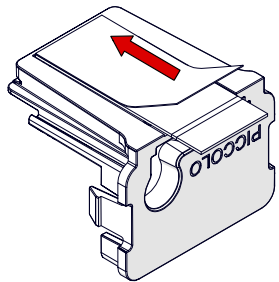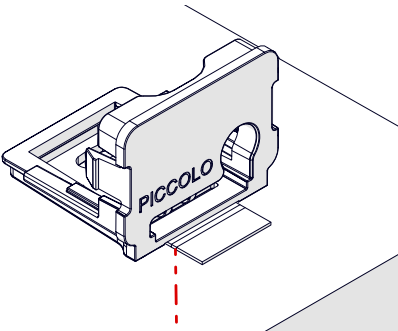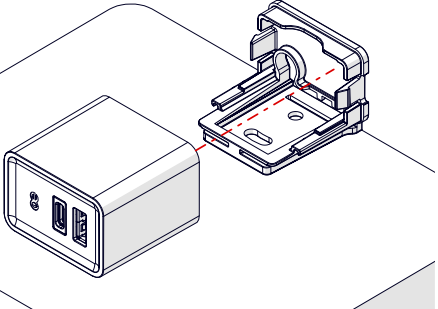- 1 Remove film from one side of fixing strip

- 2 Align with highlighted area on PICCOLO base and stick down

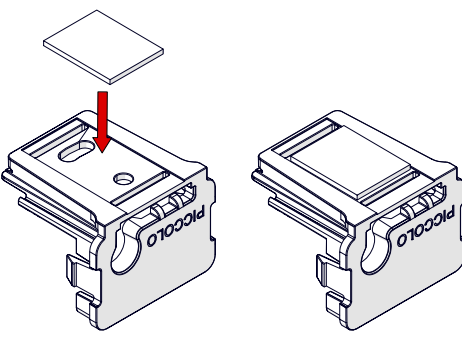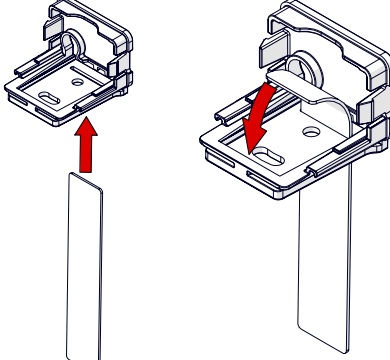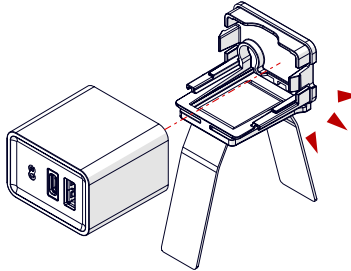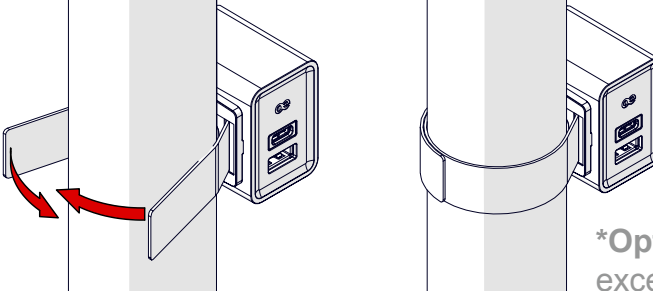- 3 Remove film from other side of fixing strip

- 4 Place PICCOLO base on surface

- 5 Slide PICCOLO body onto base until 'click' is heard


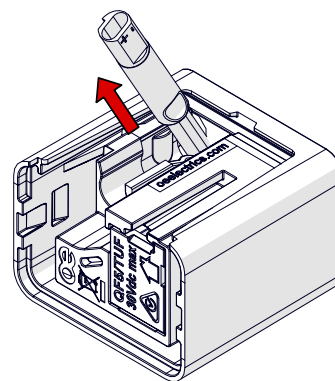
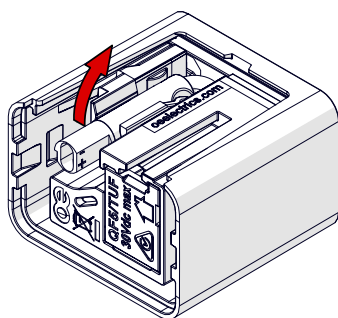
Velcro (suitable for any pole size ideally 40-60mm* (1.57" - 2.36"))

- 1 Stick rubber pad to PICCOLO base

- 2 Thread Velcro through 2 slots

- 3 Slide PICCOLO body onto base until 'click' is heard

- 4 Wrap Velcro around pole


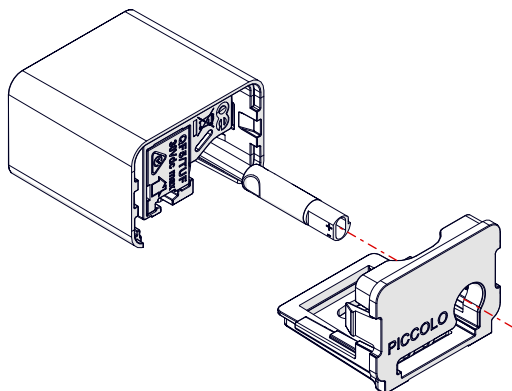
***Optional:** For poles below 40mm, trim off excess velcro when fitted for a neater finish

Extracting GST08 Cable

- 1 Lift GST08 cable from Piccolo body



- 2 Slide GST08 cable through cable exit in Piccolo back



- 3 Place Piccolo in desired location

